



Index No.	Part Name	Part No.	Price
1	Cylinder, Air	HBA18-1	
2	End Cap Casting, Air	HBA18-2	
3	End Cap Casting, Oil	HBA18-3	
4	Piston Cup, Air	6601-5	
5	Piston, Oil (must be ordered w/ index #7)	DA18-5	
6	Washer, Piston Backup (not shown)	6601-5A	
7	Cylinder, Oil (must be ordered w/ index #5)	HBA18-7	
8	Lock Nut - 1 5/8"12	DA18-8	
9	Tie Rod (4 required)	HBA18-9	
10	Jam Nut - 3/8-24	305-18	
10a	Full Nut - 3/8-24 (4X , top)	H-15	
12	Jam Nut - 3/4-16	6601-11	
14	Cylinder Gasket (2 required)	6601-12	
15	Stat-O-Seal	600-3/4	
16	Lock Ring - 5107-175	DA18-16	
19	Washer, Clamp	DA18-19	
20	Socket Head Cap Screw	305-17A	
21	Piston Cup Seal	DA18-21	
25	O-Ring - 7/8 x 1-1/8 x 1/8	DA18-25	
26	Washer, Backup (2X, not shown)	DA18-25A	
28	Adapter Bushing	DA18-28	
29	O-Ring - 15/16 x 1 3/16 x 1/8	DA18-29	
30	1/4" Close Nipple	2200-36	
31	Quick Exhaust Valve	37	
32	Adapter	33-16	
33	Street Elbow - 1/4"	2200-33	
34	Lock Washer (8X)	DA18-34	
35	Oil Cup	HBA18-35	
36	Coupling - 1/8	HBA18-36	
37	Nipple - 1/8 x 2 1/2	HBA18-37	
38	Angle Iron	HBA18-38	
39	O-Ring - 1 1/2 x 1 3/4 x 1/8	HBA18-39	
40	Washer, Seal Backup (not shown)	HBA18-5A	